

## Established on RNP AR (EoR) User Instructions

### ATTENTION ALL USERS OF EoR

EoR is a procedure applied by Toronto Terminal air traffic controllers to aircraft conducting RNP-AR approaches (RNAV Y). EoR safely permits reduced vertical and lateral separation between aircraft, during ATC-monitored simultaneous independent parallel approaches.

#### Operational Requirements

- EoR will be used during simultaneous parallel runway operations, and ATIS shall indicate when simultaneous parallel runway operations are in effect.
- RNP-AR (RNAV Y) approaches are **ONLY** available to Runway 05 via the BOXUM/DUVOS/IMEBA/VIBLI STARs.
- RNP-AR (RNAV Y) approaches to Runway 23 are **ONLY** available via BOXUM/DUVOS/NUBER/NAKBO STARs.
- When an EoR operation is in use, RNAV Y will be the only advertised approach to RWY 05/23. RNP-AR capable aircraft that are assigned RWY 05/23 are expected to plan and fly the RNAV Y approach.
- Non RNP-AR aircraft assigned RWY 05/23 should anticipate radar vectors to an ILS approach.
- Aircraft that are RNP-AR capable but cannot fly the RNAV Y RNP-AR approach must inform ATC and can expect an ILS or visual approach.
- RNP-AR capable aircraft that are unable to be cleared using the RF transition will be advised by ATC to expect vectors to final. Aircraft should plan radar vectors to the RNAV Y straight-in transition.
- When cleared for an RNAV Y RNP-AR approach, the aircraft is considered "established" on the approach procedure once it is on the defined lateral and vertical path and past the IWP(IF) for the procedure.
- The approach shall be flown using autopilot until the aircraft passes the final approach waypoint (FAF).
- If unable to comply with an ATC clearance or conduct the cleared approach, for any reason, immediately advise the controller. **DO NOT** attempt to self-navigate or manually correct an RNP-AR approach procedure deviation. Immediately advise the controller using the phraseology example below then comply with subsequent ATC instructions:

**Pilot:** "UNABLE [IWP Transition] transition, REQUEST (proposed course of action)"

Example: **Pilot:** "NAVCAN123 UNABLE MODOL TRANSITION, REQUEST VECTORS TO FINAL"

#### Break-out Instructions

**When issued break-out instructions, reaction time may be critical. If expeditious compliance is required, an ATC break-out instruction may include the word IMMEDIATELY.**

- ATC shall issue any required break-out instruction by assigning a heading and/or altitude instruction:  
Example: **ATC:** "NAVCAN123, turn left immediately heading 330 degrees, climb to 3 000"
- Established on RNP AR break-out procedures may be conducted with the autopilot on