


LOW VISIBILITY TAXI CHART

LAND RWY 26L/26R, DEPART RWY 26L/26R (RVR LESS THAN 1200 TO 600 FT)

VANCOUVER INTL, BC

CYVR

| | | |
|--------------|--|----------------------------------|
| ATIS - 124.6 | CLNC DEL - 121.4 GND - 121.7 (S) 127.15 (N) 275.8 | TWR - 118.7 (S) 119.55 (N) 226.5 |
|--------------|--|----------------------------------|

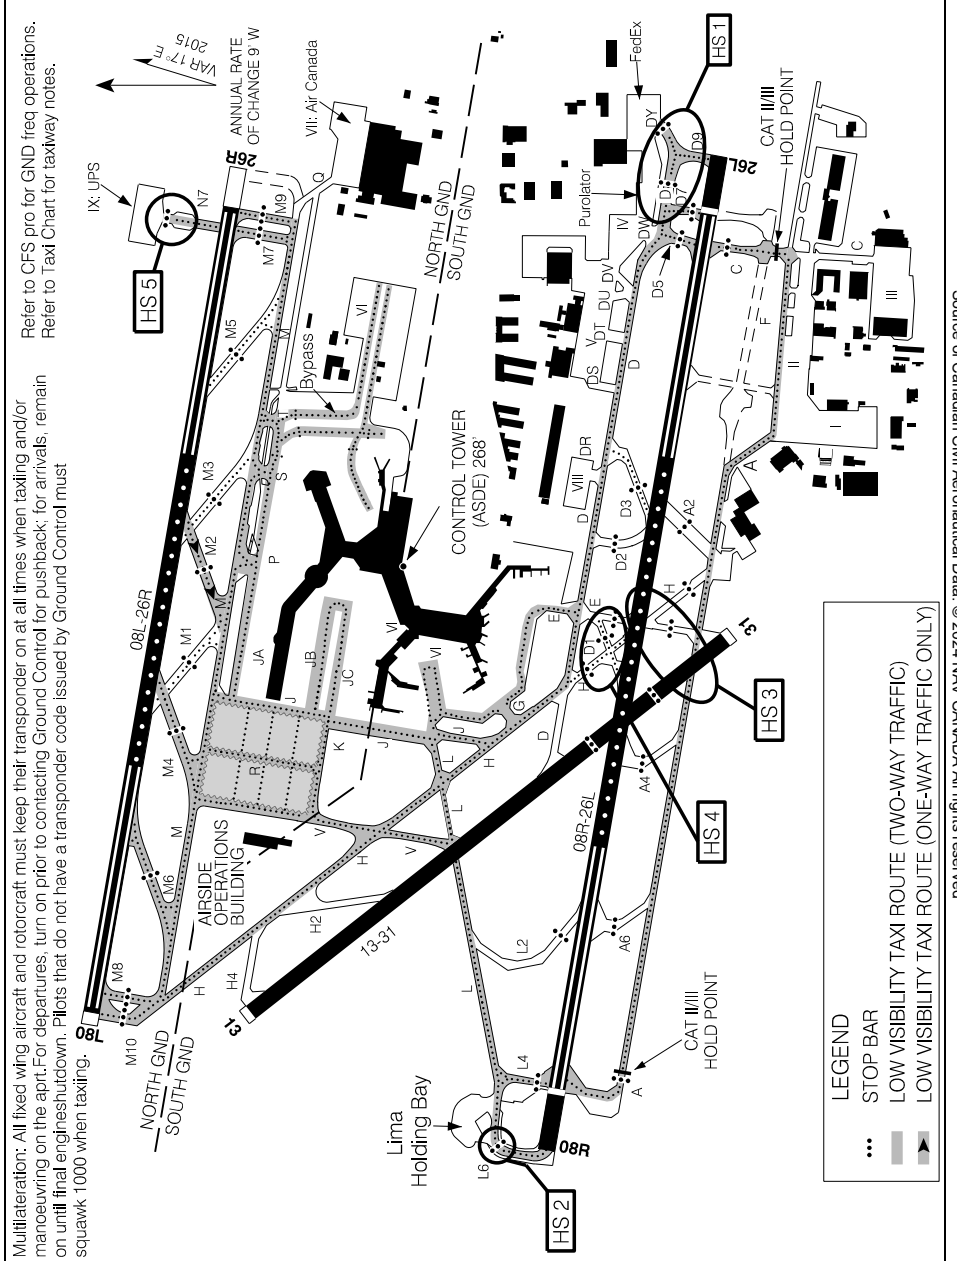

Refer to CFS pro for GND freq operations.
Refer to Taxi Chart for taxiway notes.

Multilateration: All fixed wing aircraft and rotorcraft must keep their transponder on at all times when taxiing and/or manoeuvring on the aprt. For departures, turn on prior to contacting Ground Control for pushback; for arrivals, remain on until final engineshutdown. Pilots that do not have a transponder code issued by Ground Control must squawk 1000 when taxiing.

LEGEND

- ⋯ STOP BAR
- ▬ LOW VISIBILITY TAXI ROUTE (TWO-WAY TRAFFIC)
- ▬ LOW VISIBILITY TAXI ROUTE (ONE-WAY TRAFFIC ONLY)

Source of Canadian Civil Aeronautical Data. © 2024 NAV CANADA All rights reserved

LAND RWY 26L/26R, DEPART RWY 26L/26R (RVR LESS THAN 1200 TO 600 FT)
LOW VISIBILITY TAXI CHART

CYVR
EFF 26 DEC 24