

CYYZ

ATIS – 120.82	CLNC DEL – 121.3 APRON – 122.27 (N) 122.07 (S) 122.82 GND – 121.9 121.65 119.1 PAD CTL – 131.17 131.95	TWR – 118.35 118.7	
---------------	---	--------------------	--

→ DIRECTION OF AIRCRAFT MOVEMENTS



CAUTION: BE ALERT TO RUNWAY 06L/24R CROSSING CLEARANCES. BE PREPARED TO STOP SHORT OF 06L/24R. READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.


- * See TAXI CHART for:
Taxiway notes, De-icing
operations and Hot Spots

NOTE

Multilateralism:

Pilots must keep their transponder on at all times when maneuvering on the aprt, turned on prior to brake release and on arrival, on until final engine shutdown. Pilots that do not have a transponder code issued by ATC must squawk 1000 when taxiing.

CENTRAL
DE-ICING
FACILITY

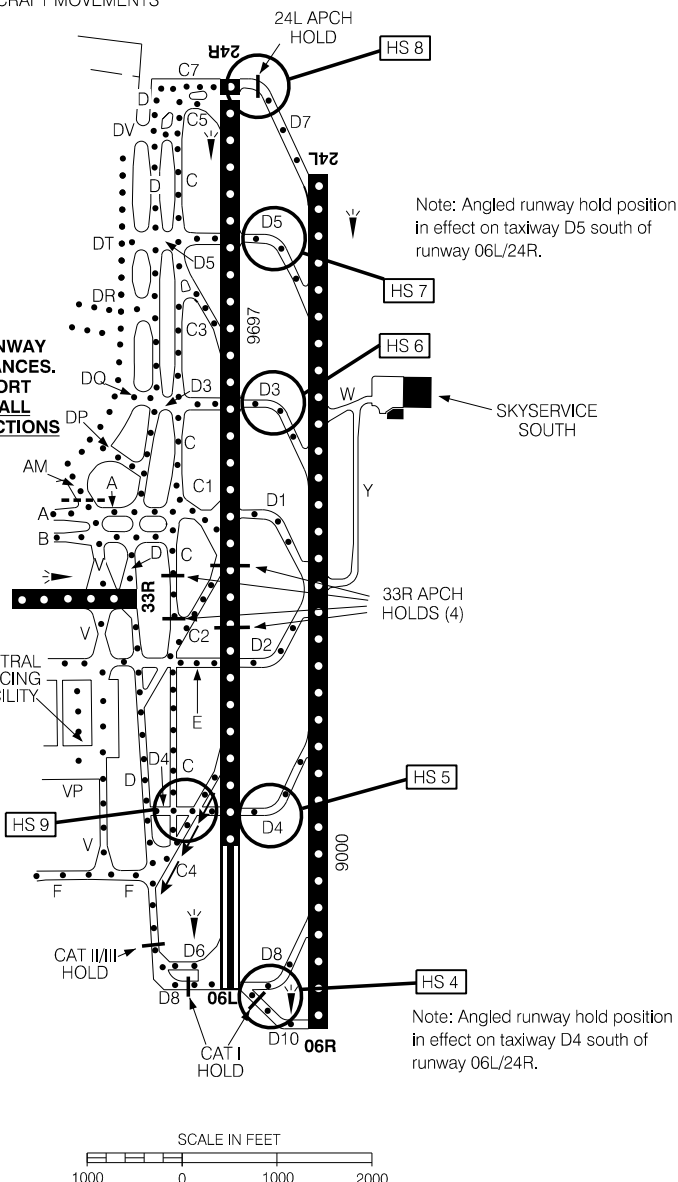

Source of Canadian Civil Aeronautical Data: © 2026 NAV CANADA All rights reserved

CYYZ

FFF 9 JUL 26

CYYZ-GM-1A

Canada Air Pilot

Effective 0901Z 3 SEP 2026 to 0901Z 29 OCT 2026