


VANCOUVER HARBOUR BC (water aerodrome)

CYHC

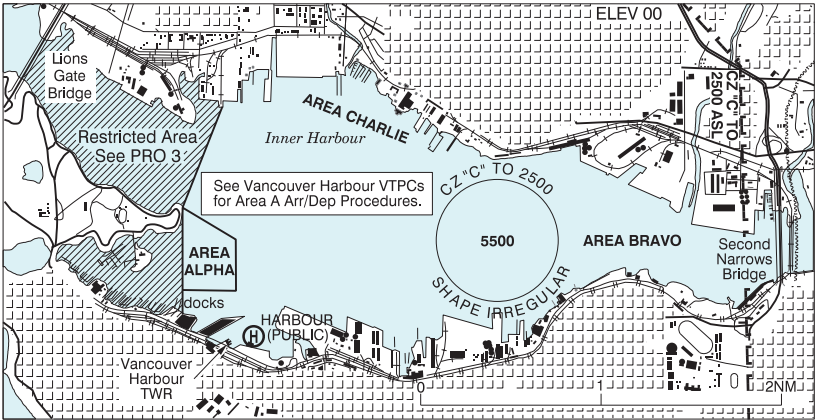

REF	N49 17 40 W123 06 41 Adj N 17°E (2013) UTC-8(7) Elev 00' VTA A5004 LO1 T1
OPR	Harbour Air 1-800-665-0212 Reg PN Vancouver Harbour Flight Centre (VHFC) 604-647-7570 or 604-328-4340 PN
PF	B-1,2 C-3,4,5,6
CUST	AOE/15 888-226-7277
FLT PLN	FIC ACC WX Kamloops 866-WXBRIEF (Toll free within Canada) or 866-541-4101 (Toll free within Canada & USA) 604-775-9601/9606/9674 LWIS H24 LAWO 15-02Z± or til 1/2 hr after SS, whichever is later.
SERVICES	FUEL OIL S 100, JB, (100LL, JA, JA-1 avbl thru VHFC) PN 100 5
COMM	RCO ATIS CLNC DEL TWR ATF TML Pacific rdo 123.15 (FISE) Vancouver Harbour 126.8 dur twr hrs of ops. Vancouver Harbour 125.35 all dep acft ctc clnc del only if instructed to do so on ATIS Vancouver Harbour 118.4 (V) 15-02Z± or til half hour after SS, whichever is later. (emerg only 604-688-9254) tfc 118.4 when twr clsd within Vancouver Harbour CZ shape irregular 2500 ASL 125.2

BRITISH COLUMBIA

AERODROME / FACILITY DIRECTORY

VANCOUVER HARBOUR BC (water aerodrome) (Cont'd) CYHC

NAV	
VOR/DME	YVR 115.9 Ch 106 N49 04 38 W123 08 57 (37')
PRO	General Aviation: Refer to Vancouver Harbour VTPCs. Commercial Aviation: 1. Listen to ATIS for direction of arr/dep and refer to the VTPCs for typical configurations (westbound, eastbound, southeastbound) and arr/dep pro for Area A as well as scenic tours over downtown Vancouver. ATC instructions override depicted procedures. 2. Arr/dep after 0700 hrs lcl. Noise sensitive areas adj to Area A. 3. Acft ops normally ltd to Area A. SW corner of Area A marked by orange buoy. No acft shall land, tkof or step taxi within rstd areas including First Narrows (Lions Gate) and False Creek. Coordinate with ATC before proceeding into Area A. Report ready for tkof when ready to apply power. 4. Pilots are requested, while observing safe oprg procedures, to maintain arr/dep profiles that avoid low flt and high power settings over Stanley Park. 5. See Vancouver VTA for VFR low lvl transit routes beyond CYHC CZ. 6. Commercial scenic tours in Howe Sound: avoid turning back towards YHC CZ South of Eagle Harbour and plan to return to YHC CZ 2,000' or ctc ATC early for conflicts with outbound tfc. ATS REQUIREMENTS: All VFR acft arriving, departing or transiting the Vancouver or Victoria Tower Class C or D airspace require a transponder code. - All acft departing Vancouver or Victoria Intl (including Water Aerodrome) call Kamloops FIC at 866-541-4101 for code assignment at least 30 min prior to flight or file a VFR Flight Plan/Flight Itinerary. - All acft arriving Vancouver, Victoria Intl (including Water Aerodrome) or transiting Vancouver or Victoria Control Zones obtain a code from one of the following ATS units: Vancouver Harbour, Nanaimo, Victoria Harbour, Boundary Bay, Langley, Abbotsford or Pitt Meadows or call Kamloops FIC at 866-541-4101. -All acft arriving Victoria Intl from a non NAV CANADA site call Kamloops FIC at 866-541-4101 for code assignment at least 30 minutes prior to flight or file a VFR Flight Plan/ Flight Itinerary.