
BRITISH COLUMBIA

AERODROME/FACILITY DIRECTORY

DELTA / DELTA HERITAGE AIR PARK BC



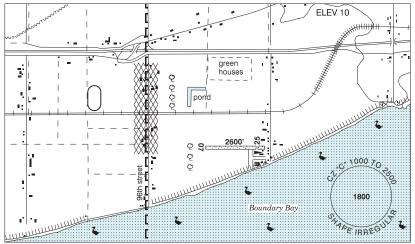

REF	N49 04 43 W122 56 17 4.5E 17°E (2013) UTC-8(7) Elev 10' VTA A5004
OPR	Recreational Aircraft Association, Chap 85 (DapCom) 604-543-8894, Caretaker 604-722-3791 Reg PPR by phone 604-878-9050
PF	B-1 C-2,3,6 D-4,5
FLT PLN FIC	Kamloops 866-WXBRIEF (Toll free within Canada) or 866-541-4101 (Toll free within Canada & USA)
SERVICES FUEL S	100LL 4,5
RWY DATA RCR	Rwy 07/25 2600x75 GRASS ThId 25 displ 300' Opr No win maint. Rwy soft when wet
COMM ATIS ATF	Boundary Bay 125.5 15-07Z‡ tfc 123.3 2NM below 1000 ASL Excluding that portion which penetrates Boundary Bay class "C" airspace.

BRITISH COLUMBIA

т

AERODROME/FACILITY DIRECTORY

DELTA / DELTA HERITAGE AIR PARK BC (Cont'd)

CAK3

ng not auth.
it alt 600 ASL. Rgt hand circuits Rwy 25 (CAR 602.96). E ABATEMENT PROCEDURES:
rtures: 25 Dep: When safe hdg 280°, then further right turn to crosswind to avoid noise tive area. wind dep auth fr Rwy 25 at 600 ASL. No southbound dep until clear of circuit to oid fit over dike and adj water area below 600 ASL. als:
ns. r to air park fr seaside. Cross midfield at 600 ASL and join downwind (CAR 6).
07́ Arr: Fr downwind, turn on base leg well bfr 96th Street to avoid noise- tive area. When S of railway tracks hdg 100° to intercept final apch E of row of
dary Bay A/D 2.5NM W, obtain clnc prior to entering Boundary Bay CZ. Refer to C. Procedures for crossing the Southern Strait of Georgia within Tml Class C ace refer to Vancouver Intl VTPC FOR CROSSING THE SOUTHERN STRAIT EORGIA ABOVE 2500FT.
mely confined circuit. Trees 750' fr thld Rwy 07, trees and obst adj to thld Rwy cft unable to accommodate noise abatement procedures and obst avoidance d avoid the air park. Beware of Boundary Bay A/D tfc close to Delta Heritage Air